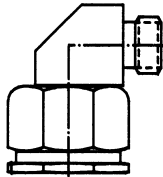
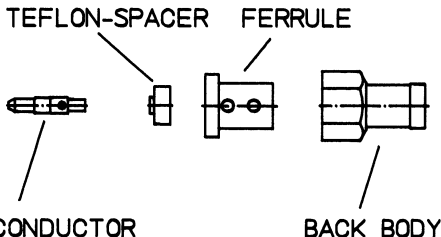
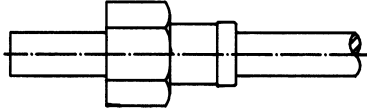
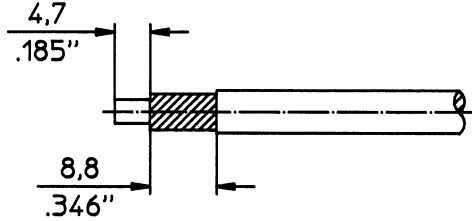
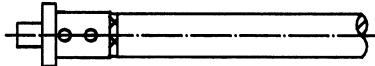
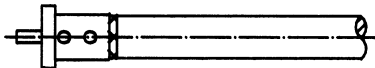
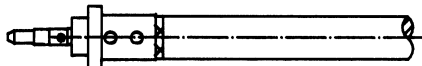
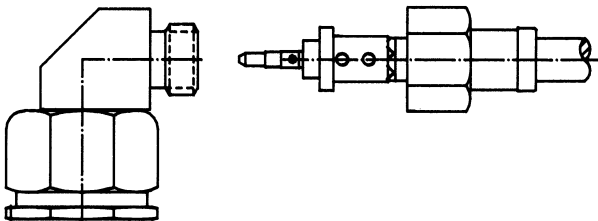


CONNECTOR TYPE	CABLE TYPE	CONNECTOR COMPONENTS	
3090-3239-02 3090-3242-02	50 HP 153	 <p>CONNECTOR HOUSING</p>	 <p>TEFLON-SPACER FERRULE CENTER CONDUCTOR BACK BODY</p>
1	Slide back body over cable.		
2	Trim outer conductor and dielectric to dimensions shown.		
3	Slide ferrule over outer conductor, seat firmly and solder.		
4	Trim dielectric. It should be flush with the ferrule.		
5	Slide teflon spacer and center conductor of connector over center conductor of cable, seat firmly and solder.		
6	Insert cable assembly into connector housing, engage threads of back body and connector housing and torque to 45 inch pounds.		

6 21.1.94